



CW FLOOR STAND

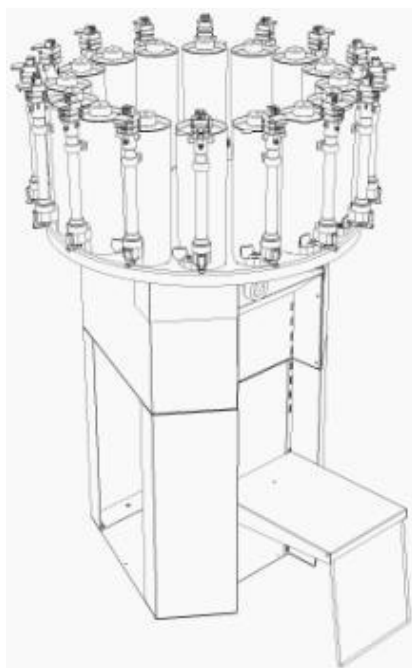


PARTS SUPPLIED


Instalando os Painéis inferiores Peças que compõe a base inferior

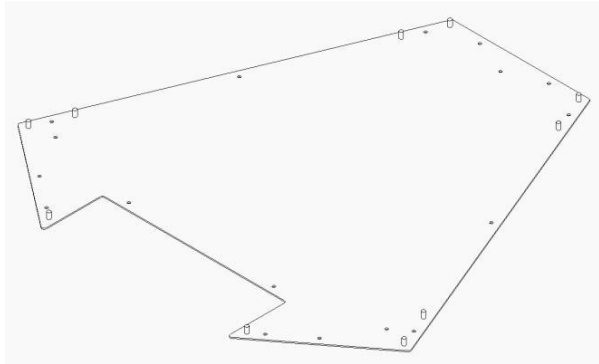


1x

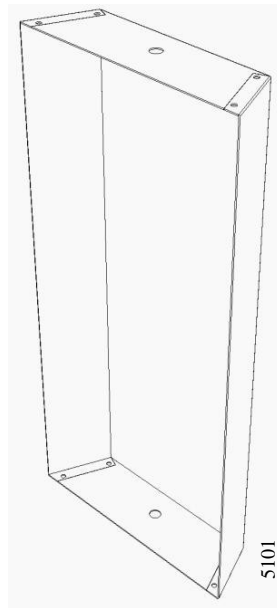

1x

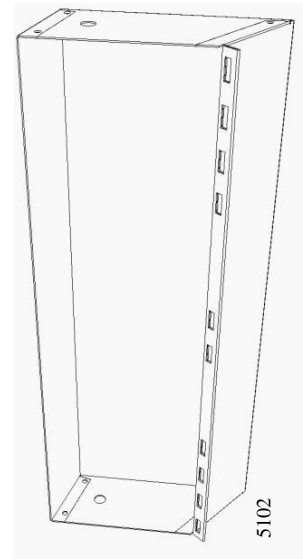

2x

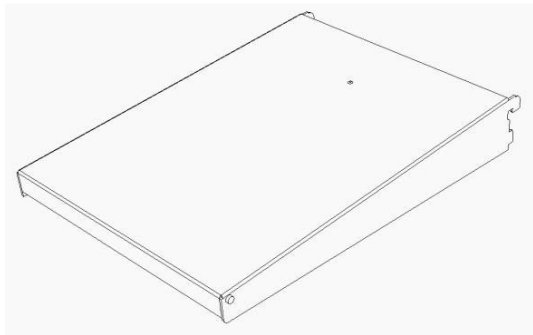


1x



20x


R0943

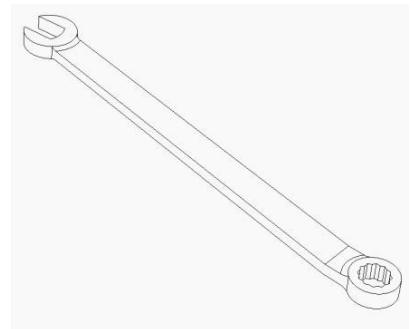

1x



R1027

- 1. Place Base Plate on the floor – with the studs facing up**
Coloque a base no piso com os pinos virados para cima.

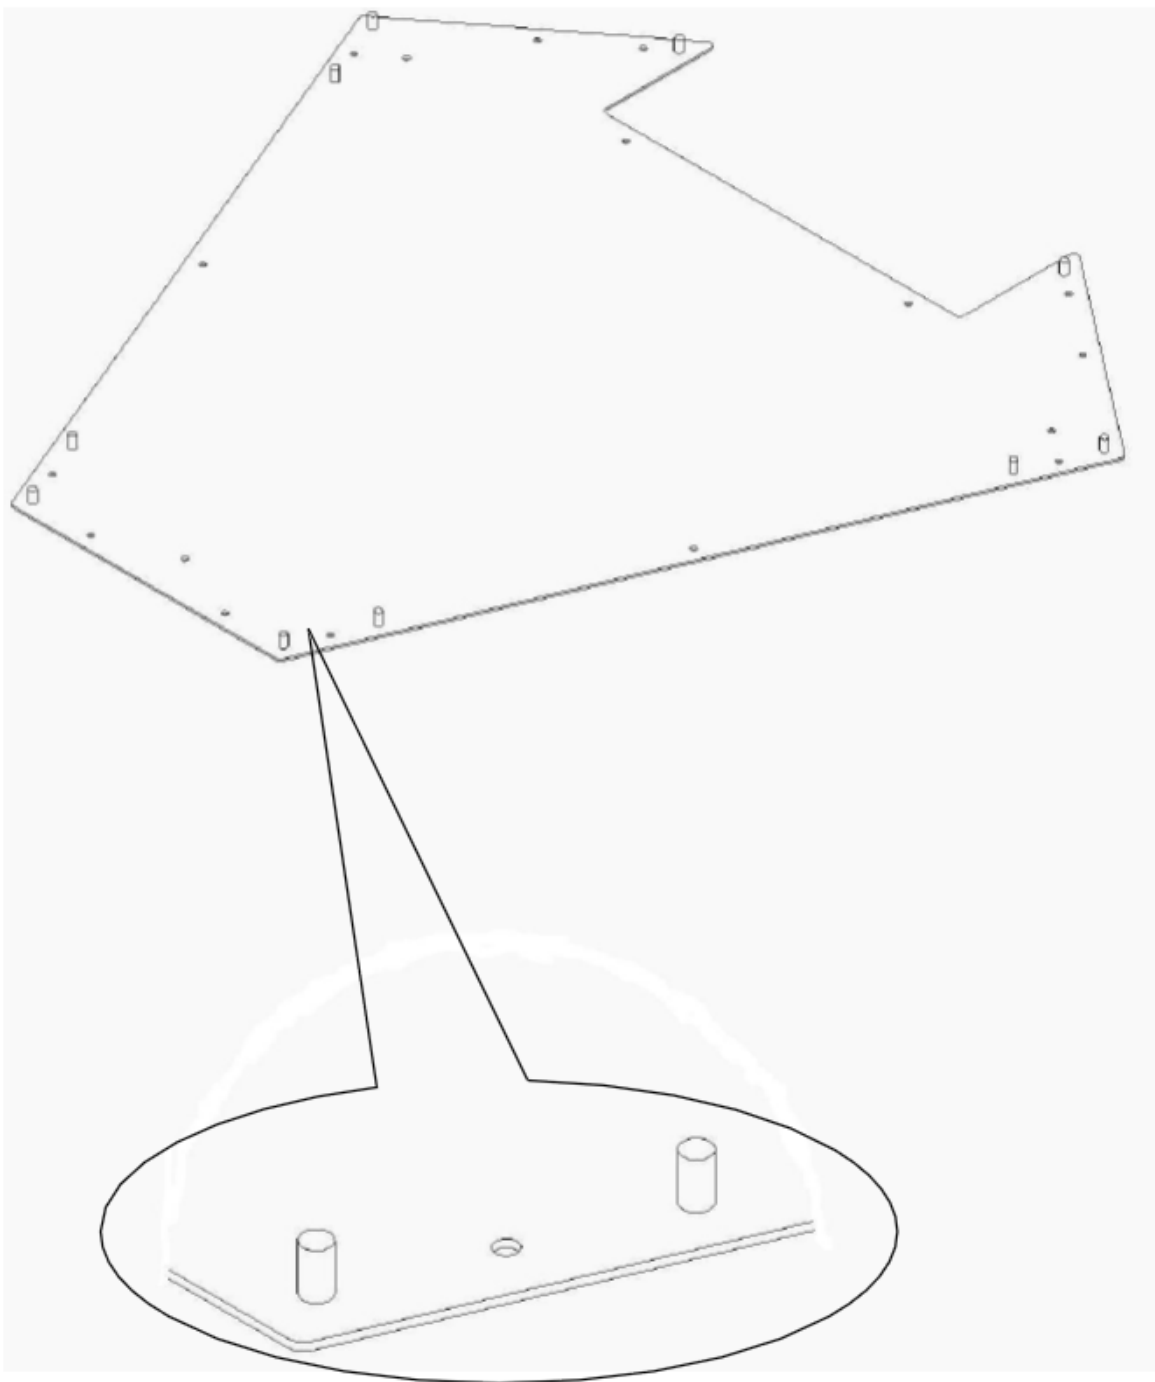


2. Attach Front Side Panel to the Base

Fixe um dos painéis frontais à base

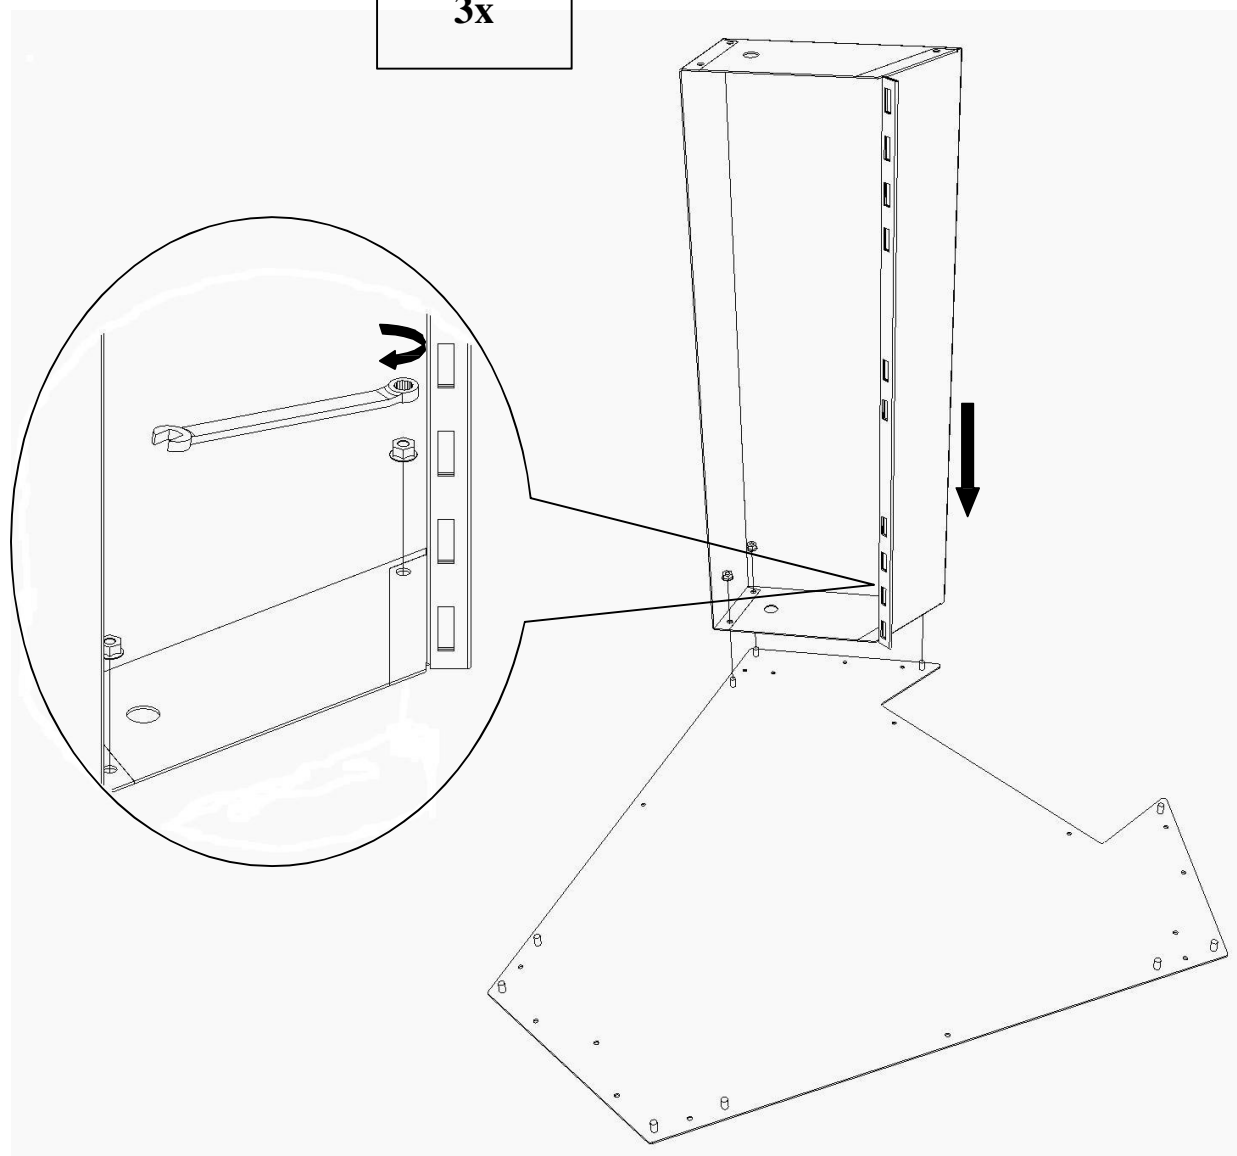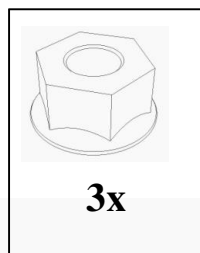


3. Attach the other Front Side Panel to the Base

Anexe o outro painel frontal à base.


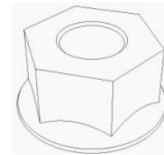


3x

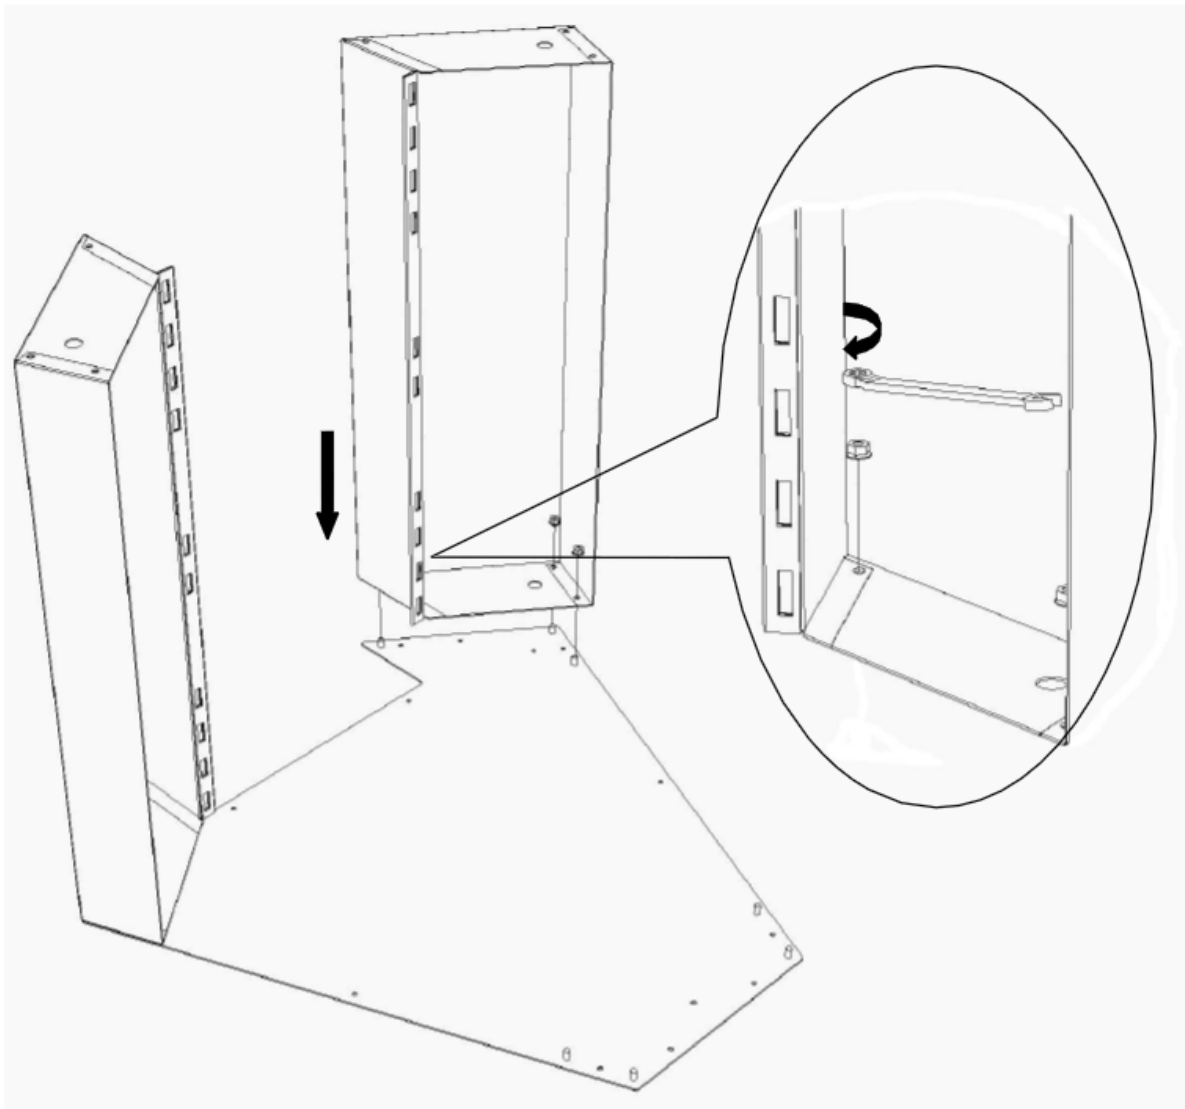

4. Attach Rear Panel to the Base



Anexe o painel traseiro à base.

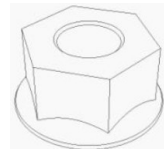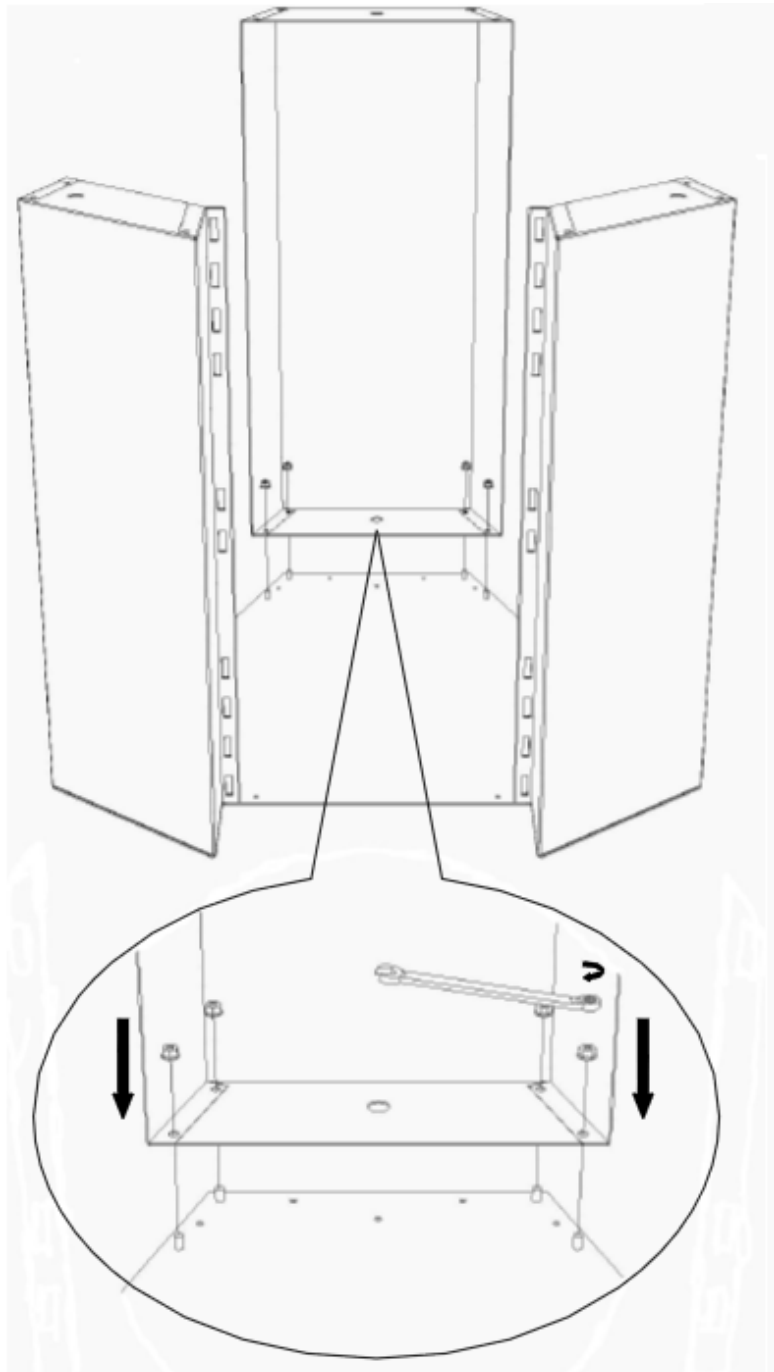

4x



5. Attach Rear Panel to the Base

Junte as duas partes.

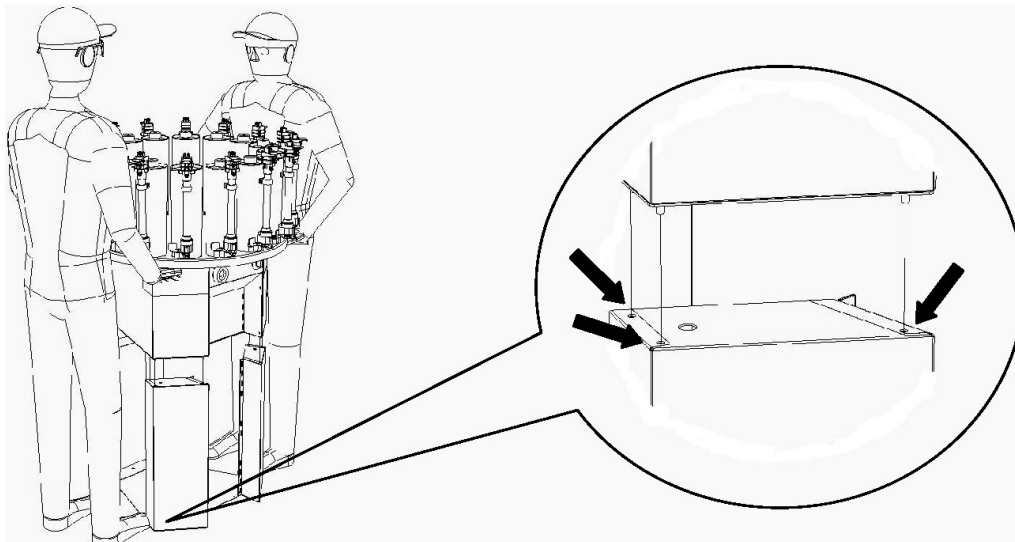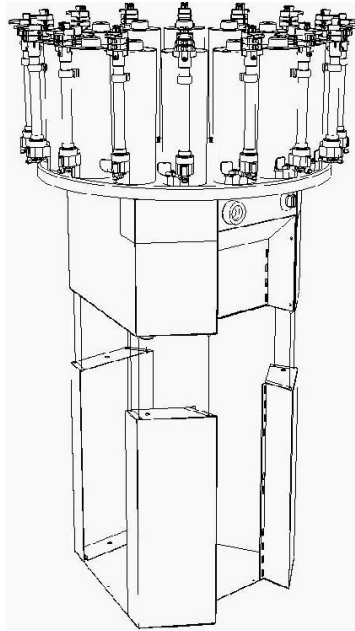

6. Fix Machine to the Base Assembly

Parafuse as duas partes

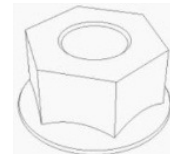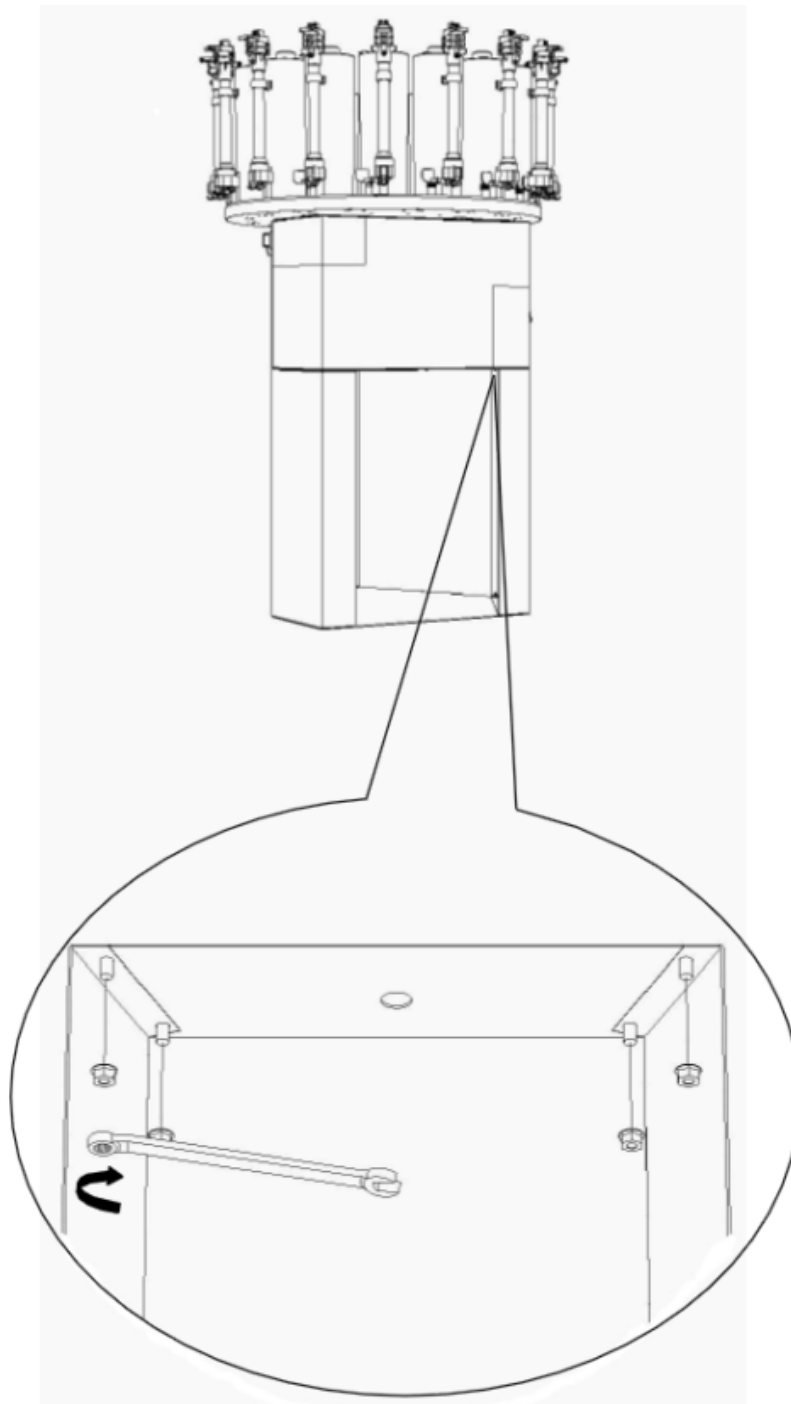

10x

7. Attach Can Shelf to Machine Assembly

